

# drought tips

Number 92-38

---

## Field Use of Tensiometers

---

A tensiometer is a device for measuring soil water tension. It consists of a cylindrical pipe about one inch in diameter with a porous ceramic cup attached to one end and a vacuum gauge attached to the other (see Figure 1, below).

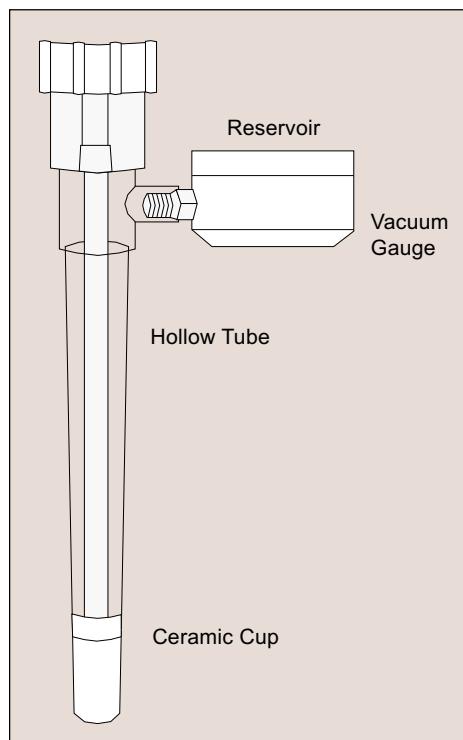


Figure 1. Tensiometer

### Why Use Tensiometers?

Tensiometers indirectly measure soil moisture tension. Since tensiometers are

installed for the entire season or longer, they provide readings at the same location over an extended period of time. Tensiometer readings are easily interpreted and indicate the soil water conditions experienced by the plants' roots. Soil salinity does not affect the readings.

Although tensiometers are used most frequently for monitoring soil moisture, they can also be incorporated into automated irrigation systems. Gauges with solenoids can be used to control an irrigation system, and tensiometers equipped with transducers can be used with computerized irrigation systems.

### Installation

To measure soil water tension, the end of the tensiometer with the porous cup is inserted through a pilot hole in the soil, which has been made with a soil probe. (The porous cup should be soaked in water for several hours before installation.) After installation the tensiometer is filled with water and allowed to equilibrate with the soil water for about twenty-four hours. Tensiometers should be installed in the zone of greatest root density, at about one-quarter to one-third of the maximum root depth. A tensiometer at this depth can be used to schedule irrigations. Table 1 gives tensiometer reading guidelines for various crops. Irrigation should take place when tensiometer readings rise above those listed in

the table. Refinements based on soil sampling will be required to adjust for site-specific conditions.

It is recommended that a tensiometer also be installed near the bottom of the root depth to assure that the moisture extends to an adequate depth. If the tensiometer reading at the lower root depth remains unchanged following an irrigation or continues to rise during the growing season, irrigation applications may be insufficient.

The number of stations required depends on the irrigation system and on soil uniformity and management. For areas up to forty acres, at least two stations should be established. Stations should be located in areas representative of overall moisture status, with separate stations for problem areas or for areas having different soil conditions. Areas with different crops should be monitored separately, since water use and root growth differ from crop to crop.

### What Do The Readings Mean?

In an unsaturated soil, soil water tension—frequently called the “suction”—falls below atmospheric pressure. As wet soil dries, the soil-water suction increases, causing water to flow out of the tensiometer through the porous cup. The small pores of the saturated cup prevent air from entering the tensiometer. This

## *drought tips*

outflow of water creates a vacuum inside the tensiometer and increases the reading on the vacuum gauge. If the soil is rewetted by irrigation, water will be drawn back into the tensiometer, reducing the vacuum inside, and the reading on the gauge will decrease. The vacuum gauge measures the suction in centibars, with a range of 0 to 100. A reading of zero

**Table 1. Tensiometer reading guidelines for irrigation.**

CROP	CENTIBARS
<b>Alfalfa</b>	<b>70-80</b>
<b>Avocados</b>	<b>40-50</b>
<b>Cantaloupe</b>	<b>35-40</b>
<b>Celery</b>	<b>20-30</b>
<b>Citrus</b>	<b>50-70</b>
<b>Corn</b>	<b>50-80</b>
<b>Cotton</b>	<b>70-80</b>
<b>Deciduous Trees</b>	<b>60-80</b>
<b>Grapes</b>	<b>40-60</b>
<b>Lettuce</b>	<b>40-50</b>
<b>Tomatoes</b>	<b>60-70</b>
<b>Potatoes</b>	<b>30-50</b>
<b>Small Grains</b>	<b>70-80</b>
<b>(vegetative stage)</b>	<b>40-50</b>

indicates a saturated soil in which plant roots will suffer from poor aeration. A reading of 10 to 25 centibars reflects a soil at field capacity. The lower reading is

for sandy soils at field capacity, and the higher reading is for finer-textured soils. Readings of 70 to 80 indicate a dry soil. Tensiometers will not read above 85 centibars.

Tensiometers do not provide information on the amount of water depleted from the soil unless they have been calibrated for the particular soil type. They therefore indicate when to irrigate, but not how much to irrigate.

### **Maintenance**

Tensiometers must be properly maintained. This requires periodically filling the pipe with water and replacing porous cups. If the soil becomes too dry (tensiometer readings greater than 85 centibars), the porous cup will break tension and air will enter the tensiometer. A cracked cup will prevent a vacuum from developing in the tensiometer and cause the instrument to always read zero. The porous cup of a tensiometer filled with water should not be exposed to the atmosphere for long periods of time. Such exposure causes evaporation of water from the cup's surface, which in turn causes salt buildup and clogging of the cup.

### **Purchasing a Tensiometer**

Tensiometers are available through local irrigation equipment dealers. They come in standard sizes ranging from 6 to 72 inches. Cost is between \$35 and \$50. Following is a list of manufacturers who can supply tensiometers:

Irrrometer Co., Inc.  
P.O. Box 2424  
Riverside, California  
92516-2424  
(909) 689-1701

Soil Moisture Equipment Corp.  
P.O. Box 30025  
Santa Barbara, CA 93105  
(805) 964-3525

---

*drought tips* is a publication series developed as a cooperative effort by the following organizations:

California Department of Water Resources, Water Conservation Office  
University of California (UC)  
UC Department of Land, Air and Water Resources  
USDA Drought Response Office  
USDA Soil Conservation Service

The University of California, in compliance with Titles VI and VII of the Civil Rights Act of 1964, Title IX of the Education Amendments of 1972, Sections 503 and 504 of the Rehabilitation Act of 1973, and the Age Discrimination Act of 1975, does not discriminate on the basis of race, religion, color, national origin, sex, mental or physical handicap, or age in any of its programs or activities, or with respect to any of its employment policies, practices, or procedures. Nor does the University of California discriminate on the basis of ancestry, sexual orientation, marital status, citizenship, medical condition (as defined in Section 12926 of the California Government Code) or because individuals are special disabled veterans or Vietnam era veterans (as defined by the Vietnam Era Veterans Readjustment Act of 1974 and Section 12940 of the California Government Code). Inquiries regarding this policy may be addressed to the Affirmative Action Director, University of California, Agriculture and Natural Resources, 300 Lakeside Drive, 6th Floor, Oakland, CA 94612-3560, telephone: (510) 987-0097.

Edited by Anne Jackson, UC Department of Land, Air and Water Resources  
Published 1992